ALL RIGHTS RESERVED

Spice Mobility Ltd. ©2011. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the phone, phone features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are no affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

Note: User's Manual is provided just to guide the user about the functionality of the phone. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.

TABLE OF CONTENTS

SAFETY PRECAUTIONS 1
UNDERSTANDING YOUR PHONE 2
PHONE OVERVIEW 3
STATUS ICONS 4
GETTING STARTED 5
BASIC OPERATIONS 6
MAIN MENU 8
MESSAGES 9
Write Message 9
Inbox 10
Drafts 10
Outbox 11
Templates 11
SMS Settings 11
MMS 11
Broadcast Message 12
S PushMail 12
PHONEBOOK 12
To save a new contact: 12
Search Contact: 13
CALL CENTER 14
Call History: Master/Slave SIM Call History 14
Call Settings: Master/Slave SIM Call Settings 15
Advanced Settings 16
MULTIMEDIA 16
Camera 16
FM Radio 17
Image Viewer 18
Video Player 18
Video Recorder 19
Audio Player 19
Sound Recorder 19
Schedule FM Radio 20
Melody Composer 20
SERVICES 21
Internet Service 21
Data Account 21

OPERA MINI 21
TOI: TIMES OF INDIA 21
WAPEDIA 21
S MESSENGER 22
RECIPES 22
GAMES 22
LIVE CONCERTS & EVENTS 22
ORGANIZER 22
Calendar 22
Tasks 23
Alarm 23
Calculator 23
Ebook Reader 23
Unit Convertor 24
Stopwatch 24
Currency Convertor 24
World Clock 24
MANAGE CONNECTIONS 24
Bluetooth 24
Multi SIM Settings 24
SETTINGS 24
User Profiles 25
Phone Settings 26
Network Settings 27
Security Settings 27
Restore Factory Settings 28
FILE MANAGER 28
FACEBOOK 29
SUPPORT AND CONTACT 29

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the phone.

- Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance. Small parts such as the SIM card, dust cap, lens ring and lens cap as well as the microSD card can be dismantled and swallowed by small children.
- Set your volume to a safe level. Permanent hearing loss may occur if you use earphones or headphones at high volume. You can adapt over time to a higher volume, which may sound normal but can be damaging to your hearing. If you experience discomfort or buzzing in your ears, reduce the volume or discontinue use of your earphones or headphones.
- Use only original batteries and charging devices, otherwise you may risk serious damage to health and property. Battery can cause property damage, injury or burns if a conductive material, such as jewelry, keys or beaded chains touch exposed terminals. The material may complete an electrical circuit and become quite hot. Take extra care while handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose of batteries in fire as they may explode.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your phone, please follow your phone.
- Improper use will invalidate the guarantee! These safety instructions also apply to original accessories.

- Do not use your phone in a high-temperature place or use it in a place with flammable gas such as a petrol pumps.
- Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.
- Do not use the phone in an environment of extremely high or low temperature, or an environment of high humidity. It may cause malfunction of the phone, the charger and the battery. The phone using environment recommendation: temp 5-35 ℃ , humidity 35%-85%, charging temp: 0oC-45 oC.
- If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Note: If your phone or any of its accessories do not function normally, please send them to the nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for service.

UNDERSTANDING YOUR PHONE

General Phone Information

Blueberry Mini is a multi SIM phone that encloses features, such as S PushMail, S Messenger, Bluetooth, 1.3 MP Camera, Video Player, Audio Player, FM radio etc. The phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM. You can select to operate SIMs as per your personal and professional needs.

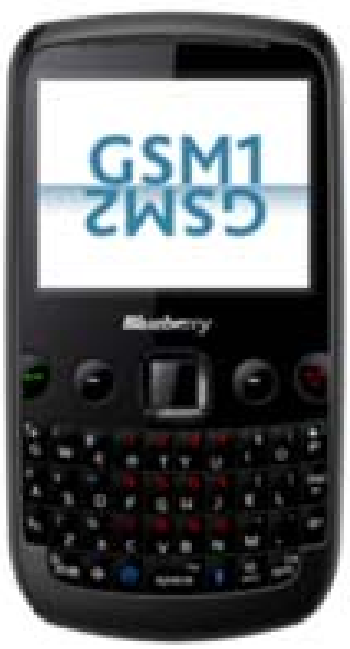

Technical Specifications:

Battery	1000 mAh
Charger	Input: 100-300V Output: DC5.0V-500mA
Dimensions	99*54*13
Weight	80g
Screen	Size: 5 cm Resolution: 220*176 Color: 65K
Standby Time*	Upto 250 hrs
Maximum Talk Time*	Upto 3 hrs
SAR Level	0.9 W/kg

* The standby time and maximum talk time depend upon the network signals and settings.

PHONE OVERVIEW

Position of Keys

1. Screen	2. Right Soft Key (RSK)
3. Left Soft key (LSK)	4. End/Power Key
5. Call Key	6. Track Pad/Ok Key
7. Keypad	8. Camera

Function of Keys

Key	Description
Call Key	To make/answer a call. In the standby mode, press this key to access the Call Log.
End/Power Key	End an ongoing call. Press and hold this key to turn on or off the mobile phone. In the menu mode, press this key to quit the current menu and return back to the standby mode.
Left Soft Key (LSK)	In the standby mode, press this key to access Main Menu. After entering the number, use this key to make a call from Slave SIM.
Right Soft Key (RSK)	Use the right soft key to execute the functions indicated at the right of the prompt bar on the screen.
Numeric Keys	Used to enter numbers, letters and some special characters. In the standby mode, press and hold the SYM key to activate Silent Mode, long press the SPACE Key to activate "FM Radio". In the edit mode, you can press the Shift key to switch among upper case and lower case, press the SYM key to enter symbols.

STATUS ICONS

The table below lists various icons that might appear on the status bar while using the phone. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the phone.

Icon	Description
	Indicates the network signal strength of Master SIM.
	Indicates the network signal strength of Slave SIM.
	Indicates the current battery capacity.
	Indicates that there is an unread SMS in Master SIM.
	Indicates that there is an unread SMS in Slave SIM.
	Indicates that there is a missed call in Master SIM.
	Indicates that there is a missed call in Slave SIM.
	Indicates that the current profile mode is the General mode.
	Indicates that the current profile mode is the Meeting mode.
	Indicates that the current profile mode is the Outdoor mode.
	Indicates that the current profile mode is the Headset mode.
	Indicates that the current profile mode is the Bluetooth mode
	Indicates that the current alarm clock is set as activated.
	Indicates the current keypad-locked state.

GETTING STARTED

Please switch off your phone before inserting or removing the battery/SIM card or memory card.

Installing SIM Card and Battery

Your phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called Master SIM, and the other one in the slot2 is known as Slave SIM.

- Remove the back cover of the phone
- Hold the phone with the front facing downwards; pull the cover
- Insert the SIM cards and battery in the phone.

- Attach the battery.
- Push the battery cover until it clicks into place.

Installing Memory Card

The phone supports T-Flash card, which is a multimedia memory card used to multiply the memory of the phone. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage.

- Switch off your phone.
- Remove the battery cover.
- Open the external cover of the T-Flash card slot.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

Charging the Battery

The phone prompts a warning tone and message stating insufficient battery when the battery power of your phone is low.

Please follow the instructions mentioned below to charge your phone:

- Plug the connector of the charger into the jack of the phone.
- Plug the charger into a standard AC wall outlet.

Note:

When is shown on the screen, it indicates that there is not enough power and you should now charge your phone. When charging is complete, the battery icon will stop flashing.

Charging……. Fully Charged…….

You must fully charge the battery before using the phone for the first time. It is recommended to charge the battery for four hours before using the phone for the first time.

If the phone is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the phone.

Switch On/Off the Phone

To turn on/off the phone, press and hold the End/Power key.

If you have enabled the SIM Lock function then enter the PIN code (the 4 to 8 digits secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

Automatic Customer Registration

After 4 hours of usage a SMS from the phone will be sent automatically for the customer registration.

Note: standard SMS charges apply.

BASIC OPERATIONS

To Make Calls

If the icon / appears on the screen, then you can make or receive calls.

- Input the phone number (should affix the international/national/regional code or district code if necessary) and then press the dial/call key to make a call.
- Press call key to make a call from Master SIM and LSK to make a call from Master SIM.
- You can select a contact number from the phonebook and call the contact person.

Tip: The signal strength may influence the quality of connection.

To Dial International Number

The phone supports dialing the international emergency phone number, such as 112 and 911. With the phone, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the phone is located within the coverage of the GSM network. Input the emergency phone number and press Call Key to dial. The phone will select the main network automatically after powered on if it is located within the coverage of the main network. The phone can use other network, called as roaming, if the phone is not located within the coverage of the main network when the network operator protocol permits.

You can dial or answer a call when the symbol of the network operator appears on the screen.

Answer/Reject an Incoming Call

- Press Call Key to receive the incoming call. You can use the earphone to answer the call when the generic earphone or Bluetooth earphone is inserted in the phone.
- Press End Key to reject an incoming call.

Options During a Call

Press <Options> to use the following functions during the call:

- **Hold Single Call**: temporarily hold the current call.
- **End Single Call**: end the current call.
- **New Call**: call the opposite party to build a Call to Many.
- **Phonebook**: enter in the phonebook menu.
- **Messaging**: enter in the SMS menu.
- **Call History**: view call logs.
- **Sound Recorder**: record the current call.
- **Mute**: open or close the mute mode.
- **DTMF**: open or close the DTMF function during the call.

MAIN MENU

Menu guides you to the various applications, features and utilities available in your handset. In the idle mode, press Left Soft Key (LSK) to access the Main Menu. Use the Trackpad to choose the desired operation and press Ok to enter the selected operation.

Messages	S PushMail	Phonebook	Call Center	Multimedia	Services
Opera Mini	TOI	Wapedia	S Messenger	Recipes	Games

Live Concerts	Organizer	Manage Connections	Settings	File Manager	Facebook

MESSAGES

Your phone features, sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service).

Press LSK (Left Soft Key) to access Main Menu and then select Messages.

OR

Select Messages Menu directly from the home screen, as shown in the image

Write Message

Select "Write Message" sub-menu to create a SMS. A SMS is a text message, which can only contain letters, numbers and symbols. After creating the text message, you can select options, to perform operations, such as send, input method, insert smiley, insert template etc.

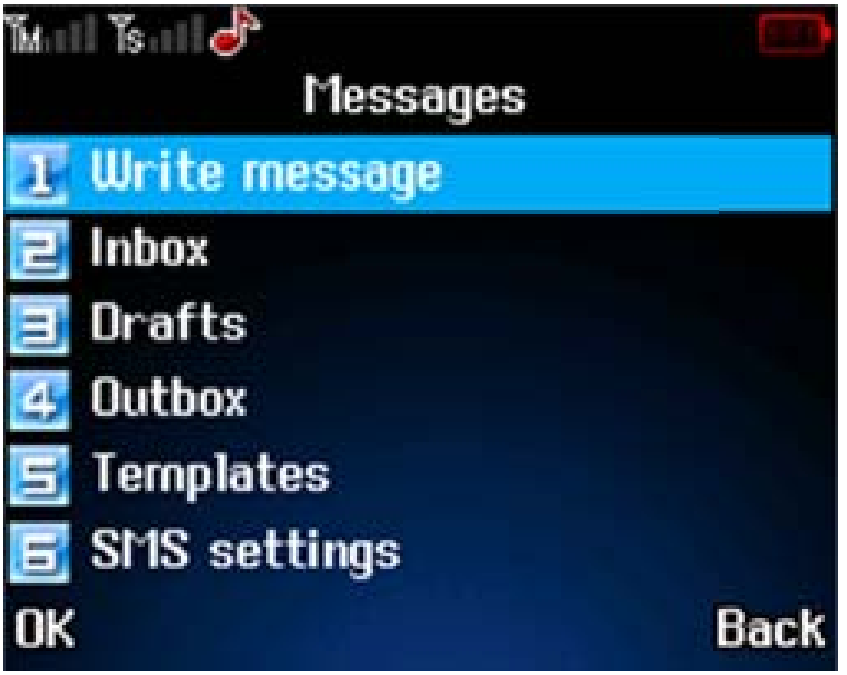

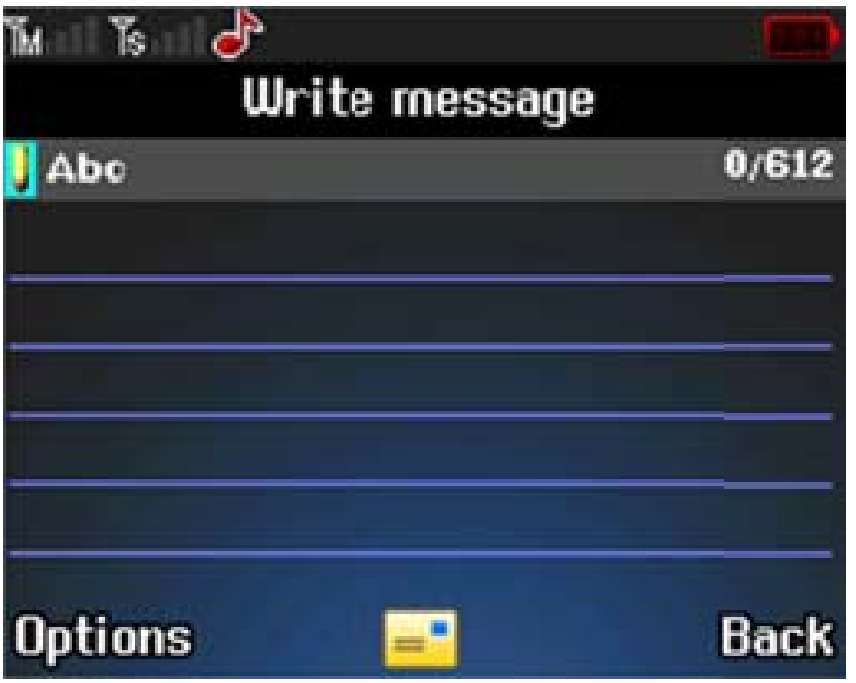

Inbox

Inbox sub-menu enables you to view all the messages received on your Master/Slave SIM.

Drafts

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

Outbox

All the messages that are sent from Master/Slave SIM get stored in the Outbox folder.

Templates

Your phone is provided with some commonly used pre-defined messages. These messages can be edited, deleted and send instantly.

SMS Settings

You can select to change the profile settings, voicemail server and delivery report settings for each Master and Slave SIM by accessing the SMS Settings sub-menu.

MMS

A Multimedia message or MMS can contain letters, an image, an audio or video file. Go to main menu > messages and then select MMS to create/view a multimedia message.

Write Message

While writing messages, you can select To, Cc, Bcc, Subject or Edit content.

- To: You can enter the phone number or E-mail address.
- Cc: send the MMS to others at the same time. You can enter phone numbers or E-mail addresses.
- Bcc: send the MMS to others secretly at the same time. You can enter phone numbers or E-mail addresses.
- Subject: edit the Subject of the MMS.
- Edit content: enter the text or add picture, audio and so on.

Inbox

The phone saves the received MMS into the inbox. Please press the left soft key to access Options, and then you can view, reply, delete and so on.

Outbox

In the Outbox, please select Options, and then you can send, or select other operations.

Drafts

In the Drafts, please select Options, and then you can send, edit or select other operations.

MMS Settings

You can change the MMS settings through this menu.

Profiles: You can Add New or select one profile to activate, or edit.

Common Settings:

- Compose: You can configure Creation Mode, best page time, auto signature, signature, Picture Resizing.
- Send: You can configure Validity period, Delivery Report, Read Report, Priority, Slide Time, and Delivery Time.
- Retrieve: You can configure Home Network, Roaming, Read Report, and Delivery Report.
- Filter: You can configure Anonymous and Advertisement.
- Memory Status: You can check the Usage, Used space and Free space.

Broadcast Message

This network service enables you to receive all kind of text messages, such as weather reports or transportation information. Please consult your network operator for more reference.

- Receive Mode: Turn on or off the Cell Broadcast.
- Read Message: Scroll the Up/Down Key to select the message.
- Languages: Select the desired language to display the broadcast message.

Note: Your network operator decides whether the language is supported or not.

- Channel Settings: You can choose Select, Add, Edit or Delete to receive the Broadcast information.

S PushMail

S PushMail is a Push Mail service that allows you to send / receive mails from / on your mobile phone. Please refer to the S PushMail and S Messenger User Guide provided alongwith the gift box for more clarification.

PHONEBOOK

Phonebook refers to the directory wherein all the contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other operations on each contact listed in this menu.
Press Left Soft Key (LSK) in the idle mode and select Phonebook.

To save a new contact:

1. After accessing Phonebook, select Add new contact

Select to add
New Contact

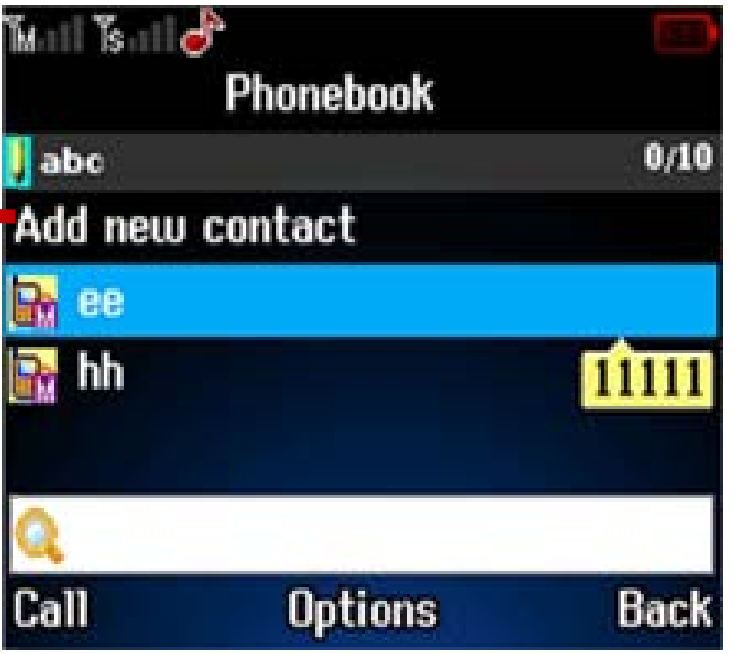

OR

Dial the number using the keypad and select save

You can also assign a specific picture and ringtone to the new contact, if the storage is selected as ”phone”.

Search Contact:

1. Input the first characters of a name to be searched.
2. Select a desired entry from the list.

Enter the initials of the
name to be searched

Select a contact from the list and press ok to view the details. To perform the following operations on the selected contact, press Options:

- View: view the details of the contact.
- Send text message: send a message to the current contact.
- Send multimedia message: send a MMS to the contact.
- Call: make a call.
- Edit: edit the current contact.
- Delete: delete the selected contact.
- Copy: copy the contact details.
- Move: move the contact.
- Send contact: send contact as Message/Bluetooth.
- Add to blacklist: add the contact to the blacklist.
- Mark several: mark several contacts and perform operations on all the selected numbers.
- Caller groups: manage the caller groups.
- Phonebook settings: you can view/change various phonebook settings, such as preferred storage, memory status, copy/move all contacts, on/off speed dial etc.

CALL CENTER

This sub-menu lets you view the call details i.e. the missed, received and dialled call logs. Master/Slave SIM call details can be viewed separately. Scroll the list using the trackpad to select a call and then select view to see the details. Press options to perform the operations, such as call, send message, add contact to blacklist, delete etc.

Call History: Master/Slave SIM Call History

Missed Calls

With this function, you can check recent missed calls.
Scroll the Up/Down keys to select a missed call.
Press OK key to access Missed Call Information, and you can Delete, Save to Phone book, call, Edit and so on.

Dialed Calls

With this function, you can check recent dialed calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Received Calls

With this function, you can check recent received calls. In this function, you can Delete, Save to Phone Book, Call, Edit and so on.

Delete Call Logs

You can delete all records of missed calls, dialed calls or received calls with this function or Delete all folders drastically.

Call Timers

- Last Call: The last call time can be checked.
- Dialed Calls: The total time for all dialed calls can be checked.
- Received Calls: The total time for all received calls can be checked.
- Reset All: Reset the counters.

Call Cost

- Last Call Cost: You can check the cost of last call.
- Total Cost: You can check the total cost of all calls.
- Reset Cost: You can modify the cost of call, and reset the cost to 0. PIN2 code is required while modifying.
- Max Cost: You can check and modify the upper limit. PIN2 code is required while modifying.
- Price Per Unit: You can check and modify the call rate. PIN2 code is required while modifying.

Note: This function is related to the SIM card. Some SIM cards don't support the function. PIN2 is provided from the network operator. Please consult your network operator to obtain the number.

Text Message Counter

- Sent: You can check and clear the number of sent messages.
- Received: You can check and clear the number of received messages.

Note: This function has nothing to do with the SIM card. The amount of sent or received messages will not change even if you change the SIM card.

GPRS Counter

You can check or reset the Last Sent, Last Received, All Sent, All Received and Reset Counter.

Call Settings: Master/Slave SIM Call Settings

- Caller ID (Net work Service): You can select Set By Network, Hide ID or Send ID. The default state is the Set By Network.
- Call Waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Net work Service).
- Call Divert: This network service allows you to divert your incoming calls to anther number. For details, contact your service provider.
- Call Barring: Activate, this network service allows you to restrict incoming calls from your phone. For details, contact your service provider.

- Closed User Group: You can add a group.

Advanced Settings

- Blacklist: you can set 20 numbers. When this Black list is enabled, you won't receive the calls from the numbers entered in the Blacklist.
- Auto Redial: On, the phone will automatically redial the last called number after a while if you fail to connect to the number.
- Call Time Display: On, the call time will display.
- Call Time Reminder: This function prompts you to end the call in time to save the call cost. You can select Off, Single, or Periodic.
- Auto SMS Reply: Set it to on/off

MULTIMEDIA

This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the main menu and select Multimedia. The various multimedia features provided by Blueberry Mini include Camera, FM Radio, Image Viewer, Video Player, Video Recorder, Audio Player, Sound Recorder, Schedule FM Radio and Melody Composer.

Camera

The phone is provided with a 1.3 MP camera, which supports the photographing and video shooting functions. Pictures are saved in the file system of the phone or the memory card.

To Capture An Image:

1. Go to Main Menu > Multimedia > Camera
2. The camera screen will appear
3. Aim the phone at the subject
4. Click the center key, as shown in the image below

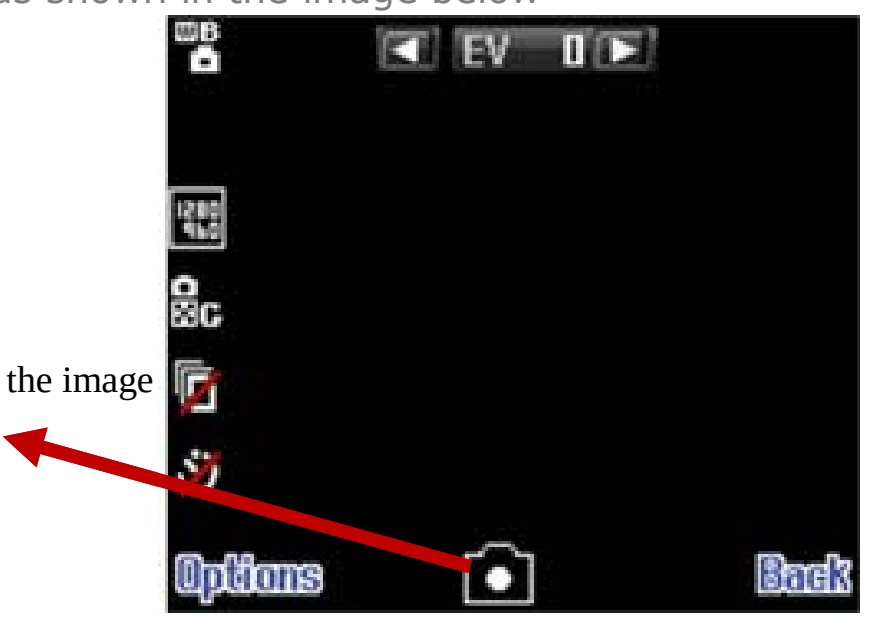

Click to capture the image

Configuring Camera Settings:

After switching on the camera mode, press options to configure the settings. You can change the brightness, contrast, image size, image quality, white balance and scene mode.

FM Radio

You can use your phone to listen to FM radio stations once the original Headset is plugged into the accessories connector. Select FM Radio from Multimedia Menu Or Long press SPACE Bar in the idle mode to switch on the radio.

Manage volume

Search radio stations

Switch off the FM

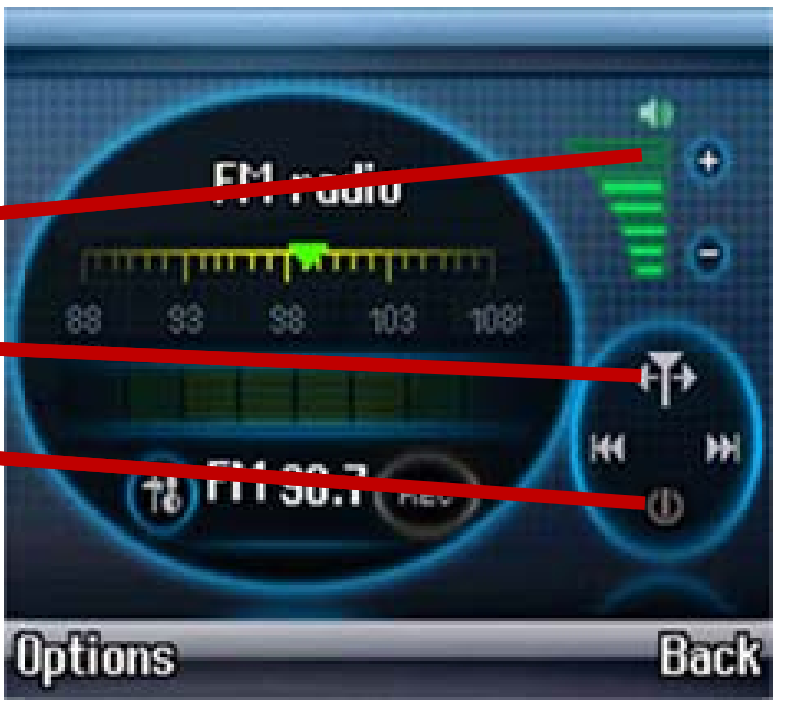

Image Viewer

Pictures taken can be accessed quickly in Image Viewer. Go to Menu > Multimedia > Image Viewer. All the images available in the storage selected by you will be displayed.Select an image to view OR press options to send the selected image, change the storage, delete all files, use the image as wallpaper/screen saver/caller picture, rename the file etc.

Video Player

Select a video clip and press OK key to open it. Press OK key to play the video clip.

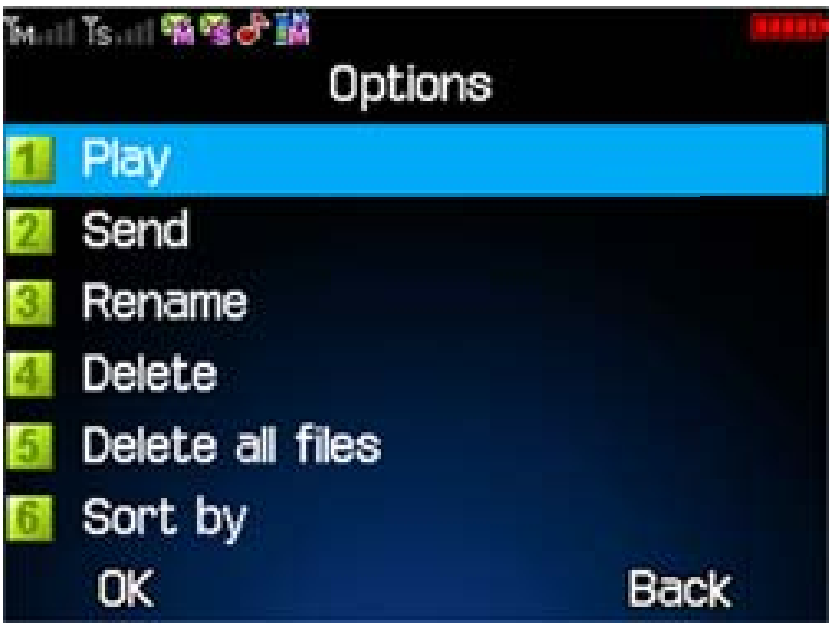

Video Recorder

In standby mode, select Menu > Multimedia > Video Recorder to launch the video recorder and shoot your videos.

To Record A Video:

1. Go to Main Menu > Multimedia > Video Recorder
2. The video mode will appear
3. Aim the phone at the subject
4. Click the center key to start recording

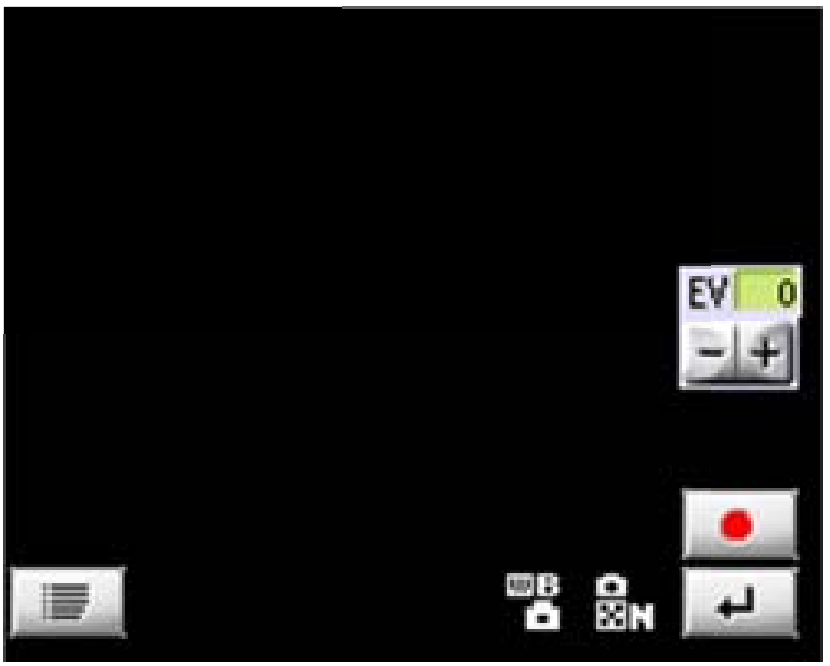

Configuring Video Settings

After switching on the video mode, press options/LSK to configure the settings. You can change the brightness, video quality and white balance.

Audio Player

Audio Player allows you to play audio files. Please save your audio files in the My Music folder of the T-Flash memory card. You can stop, pause, play and switch to the next/previous song using the trackpad.

Sound Recorder

The mobile phone supports 2 recording formats: WAV and AMR. You can record conversations, which may be saved to the Audio folder under File Manager. After selecting a recording, you can select to Play, Append (only for AMR), Rename, Delete, Delete All files, Use As and Send the file.

Schedule FM Radio

With this function, your phone can record the FM program as the schedules once the original Headset is plugged into the accessories connector. You can set On/Off, the date and time, repeat style, channel settings and record settings.

Melody Composer

The mobile phone enables you to compose your favorite music as the tune of the incoming call, alarm.

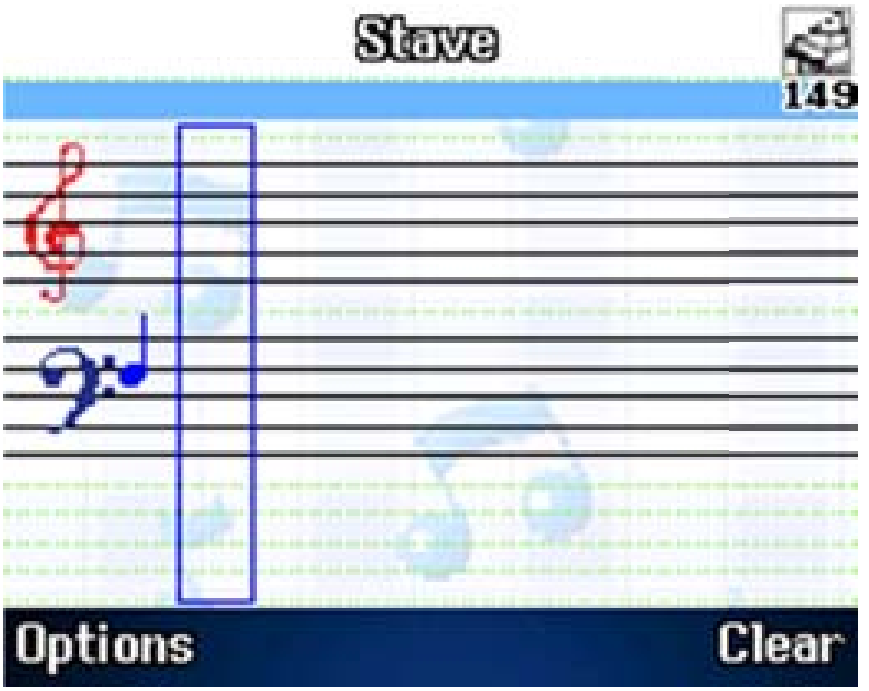

Note: The phone can save multiple tones edited by you according to the volume of tones.

SERVICES

To access the Internet menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

Internet Service

You can surf on the network with this function. After entering in the function, you can perform:

- **Homepage**: indicates the default website of the internet
- **Bookmarks**: used to save most commonly-used websites
- **Recent Pages**: browse the record of the recently browsed web pages
- **Input Address**: input the website to be searched and press finish button to access to the network directly
- **Service Inbox**: save the short messages sent from the website
- **Settings**: set up WAP-related service
- Select SIM: select a SIM card to access to WAP
- Profiles: the GPRS is set up for the phone by default
- Browser Options: set up the waiting time and display image
- Service Message Settings: set up to open/close the service, prohibit/always use the white list setting, never confirm/confirm/ not confirm SL setting and add the white list
- Clear cache: clear the cache
- Clear cookies: clear the data

Data Account

You can use this function to edit the account related settings.

OPERA MINI

Opera Mini is a fast and compact web browser that allows you to access the Internet on your phone. With Opera Mini, you can use your cell phone to access web sites and content, including your mail, community sites, news, blogs and more. Please ensure that you have GPRS settings in your phone to use Opera Mini. Contact your operator for GPRS settings.

TOI: TIMES OF INDIA

It is a third party news service. Please ensure that you have GPRS settings in your phone to open TOI. Contact your operator for GPRS settings.

WAPEDIA

Welcome to Wapedia, the encyclopedia for mobile devices. Wapedia brings the contents of Wikipedia to mobile devices offering the most high speed and up-to-date articles. Standard Wikipedia pages are typically too long for display on these devices, so long pages are divided into smaller chunks to fit into the small displays. Wapedia can be accessed through Fun Spice section in your spice mobile phone. Please ensure that you have GPRS settings in your phone to open Wapedia. Contact your operator for GPRS settings.

S MESSENGER

S Messenger is an All-in-One Mobile Instant Messenger which allows you to chat on your mobile with all your friends on Facebook, Yahoo, MSN, and Google Talk. Please refer to the S PushMail and S Messenger User Guide provided alongwith the gift box for more clarification.

RECIPES

Now get the recipe for your favorite cuisine instantly by accessing the Recipes sub-menu after entering the main menu. Please ensure that you have GPRS settings in your phone to open Wapedia. Contact your operator for GPRS settings.

GAMES

For your entertainment purpose, your phone is provided with several interesting games, such as F1 Race & Snake and Java applications, such as S Messenger and Opera Mini. To access this function, press Menu in the idle mode and select Fun & Games. You can set the BGM, sound effect, vibration and volume of the game as per your choice by selecting the Game Settings sub-menu.

LIVE CONCERTS & EVENTS

This service provides you information about various concerts and events happening all over India. You can also get information about artists performing in those events. You require GPRS connection to use this feature. Please contact your operator for GPRS activation.

ORGANIZER

The organizer menu gives you access to a number of additional features including Calendar, Tasks, Alarm, Calculator, Ebook Reader, Unit Convertor, Stopwatch, Currency Convertor and World Clock.

Calendar

You can view and edit the memo of a specified date with this function.

- View: You can view or edit the daily arrangement of the day.
- View all: You can view or edit all the daily arrangement of the day.
- Add event: You can select task types: Reminder, Meeting, and Course.
- Delete event: You can select delete entries form All, Overdue, Spec Period.
- Jump to date: Skip to the specified date to view or edit the daily arrangements of the day.
- Go To today: Return to today's view.
- Go To weekly view: Go to the specified date to check which week/Month it is.

Tasks

You can View, Add, Edit, Delete, Delete Overdue, Delete All, Send Vcalendar and Save As File as desired. Start up the Tasks and press OK. Press Add to access to add a new memo.

Alarm

The mobile phone provides 5 alarms and you can set them as per your need. An icon will appear on the desktop indicating the alarm is set to on. You can set/edit the time, alarm tone, snooze time and alert type for each alarm.

Calculator

Calculator enables you to make basic arithmetic calculations, such as addition, subtraction, multiplication and division. Enter the numbers and choose the desired operator. Use CLEAR to delete the entered numbers and = to get the output.

Ebook Reader

The phone supports reading files in the *.txt format, which is ideal for reading an e-book. Store the *.txt files in the Ebook folder, and then you can read them in E-Book reader.

Unit Convertor

The phone provides the unit conversion for weight and length.

- Enter the amount to be converted.
- Press the OK key to obtain the converted result.

Stopwatch

Stopwatch is used for measuring time with possibility to register several results and suspend/resume measurement.

Currency Convertor

To store exchange rate, press "OK", then choose exchange rate setup. Input one rate and press OK. Enter the money amount and press OK, and then choose exchange to foreign currency.

World Clock

Scroll to browse every city's time zone in the world map. The related date and time will display at the bottom of the screen.

MANAGE CONNECTIONS

Bluetooth

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Power: To activate or deactivate Bluetooth as needed.
- Inquiry audio device: To search audio devices automatically.
- My device: To search new devices automatically.
- Active devices: show a list of active devices.
- Settings: Set some paramount of your Bluetooth.
- About: Provide information of your Bluetooth.

Multi SIM Settings

You can choose to operate only Master SIM/Slave SIM or both the SIM as per your desire.

SETTINGS

In the standby mode, access **Main Menu** and then **select Settings**.

User Profiles

The phone provides seven user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are General, Meeting, Outdoor, Indoor, Silent, Headset and Bluetooth. The phone will automatically enter the headset profile if you connect the headset to your phone.

General

Activate

Customize

- **Tone Settings:** Includes Master/Slave SIM Incoming Call, Power on, Power off, Master/Slave SIM Message, Key. You can select built-in ring tunes, or the tunes composed by yourself.
- **Volume:** Includes the volume setting of Ring Tone and Key Tone. The volume degree is from 1 to 7.
- **Alert Type:**
  - Ring Only: Just ringing, no vibration.
  - Vib. Only: Just Vibrating, no ringing.
  - Vib. and Ring: Ringing after vibration.
  - Vib then ring: Ringing then Vibration.
- **Ring Type:**
  - Single: Rings once when a call is coming.
  - Repeat: Rings continuously when a call is coming.
  - Ascending: Rings continuously and the volume increases gradually.
- **Extra Tone:**
  - Warning: If necessary, you will be warned by the prompt tone.
  - Error: You will be warned by a tone if you make a mistake.
  - Camp On: A prompt tone will be heard after searching the network successfully.
  - Connect: A prompt tone will be heard after the call gets connected.
- **Answer Mode:**
  - Any Key: Press any key to answer a call (Except of Hang Up Key and Right Soft Key).

Meeting

Please refer to "General" for more details.

Outdoor

Please refer to "General" for more details.

Indoor

Please refer to “General” for more details.

Silent

Please select activate to enable the silent mode on.

Note: Press and hold the SYM key to enable or cancel the silent mode.

Headset

Insert the earphone and access the Headset mode automatically. This mode has no Activate option. Please refer to “General” for more details.

Bluetooth

You will enter into Bluetooth mode after you activate the Bluetooth function. This mode has no Activate option; the detailed operation has been shown in the “General”.

Phone Settings

Smart Desktop

Set shortcuts as per your use/choice in idle screen

Track Pad Settings

You can change the sensitivity and vibration level of the track pad as per your own convenient.

Time and Date

- **Set Home City:** Select the desired home city.
- **Set Time / Date:** Enter the current time and date.
- **Set Format:** Select a time and a date format.
- **Update with Time Zone:** It can be set to On or Off.

Schedule Power On / Off

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time. Please disable the Schedule Power On function before you board an airplane.

Language

Blueberry Mini supports English language.

Pref. Input Methods

Select the desired input method for the default input method.

Display

With this function you can configure the basic status of display characteristics including Wallpaper, Screen saver, Power On Display, Power Off Display, Show date and time, Show owner number.

Auto Update of Date and Time

It can be set to On or Off.

UART Settings

When using this phone for GPRS, select different UART port to decide whether Master /Slave SIM to be used.

Misc. Settings

LCD backlight: You can set the LCD backlight.

Network Settings

Master/Slave SIM Network setup

Network Selection

You can choose Automatic or Manual to select the network (Auto is recommended). When you select Automatic, the phone will make the preferential selection according to the network where the SIM card belongs. When you select Manual, you are required to select the same network as the registered network with the network operator by SIM card for your use.

Preferences

Select the Preferred Networks. The default network is the network where the SIM card belongs. Select Options to perform the following operations:

- Add From List: Display all PLMN list.
- New: Create a new network and set the network priority.
- Change Priority: Reset the selected Network Priority.
- Delete: Delete the current preferred network.

Security Settings

Master SIM/Slave SIM Security Settings

- **Master SIM/Slave SIM Lock:**

You will be asked to input the PIN. It can be configured if the PIN is correct. If SIM card is set on, you will need to input the PIN every time you switch on the power. If you enter incorrect PIN three times, you will be asked to enter PUK. PUK is used to release and modify the locked PIN. If PUK is not provided or missed, please consult your network operator.

- **Fixed Dial:**

If this function is enabled, only phone numbers in the Fixed Dial List can be dialed. PIN2 is required for this function. Network support is also required.

Note: You need to enter PIN2 after the phone gets switched on; PIN2 is not required before the phone is switched off. Therefore, please switch off the phone and switch it on again after configuration, if you do not want others to change the status of the Fixed Dial.

- **Barred Dial(only for Master SIM):**

If this function is activated, the phone numbers in the barred dial list cannot be dialed. PIN2 is required for the function. Network support is also required.

- **Change Password:**

You can change Master SIM/Slave SIM PIN, Master SIM/Slave SIM PIN2.

Phone Lock

You can lock or unlock the phone. Enter the password to activate or deactivate the phone lock. When the phone is locked, you will be required to enter the phone password. 4-8 numbers can be used for the phone password. The default phone password is **1122.**

Auto Keypad Lock

You can lock/unlock the phone keyboard and set the Key Lock Time to None, 5 sec, 30 sec, 1 min, and 5 min.

Change Password

You can change the phone password using this sub-menu.

Restore Factory Settings

Access Settings to select Restore Factory Settings, and press OK. All settings can be restored to factory settings with this function. The default password is 1122.

FILE MANAGER

You can browse, open and manage the data saved in the Phone and Memory card by accessing the File Manager sub-menu. The phone provides a certain space for users to manage files and supports the T-Flash card. You can use the file manager to conveniently manage various directories and files on the phone and the T-Flash card. Choose Files to enter the root directory of the memory. The root directory will list the default folders, new folders and user files. You can also format both the storage i.e. phone and memory card.

FACEBOOK

Facebook is a very popular social networking site around the world giving people the power to share and make the world more open and connected. Millions of people use Facebook everyday to keep up with friends, uploads an unlimited number of photos, share links and videos, and learn more about the people they meet. Please ensure that you have GPRS settings in your phone to open Facebook. Contact your operator for GPRS settings.

SUPPORT AND CONTACT

You can visit www.spice-mobile.com for additional information, downloads and services related to your Spice handset.

To check for your nearest SPICE service center, you can visit www.spice-mobiles.com/support-services.

For further assistance or queries, you can call on SPICE customer care number 1800-300-77423 (toll free) or mail at customercare@spicemobile.in or product@spicemobile.in.

To know the address of your nearest Spice service station please SMS-SPICE SERVICE to 56300.